


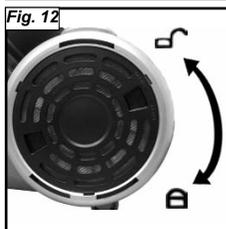
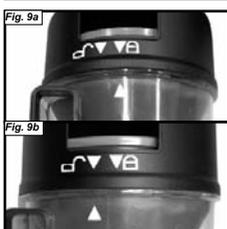
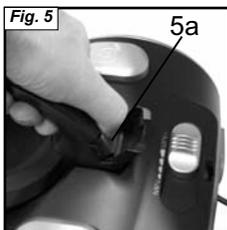
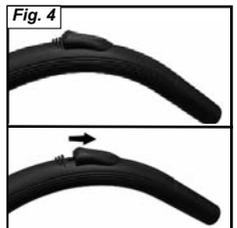


# AIR TECH C100

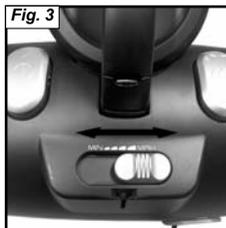

# ASPIRAPOLVERE AIR TECH C100

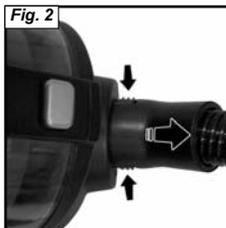

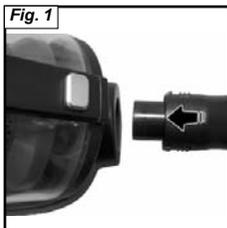

Read these instructions carefully before using the appliance.

## KEY

- 1) Power Supply cable
- 2) Parking housing
- 3) Cursor to adjust suction
- 4) Cable winder button
- 5) Dust container release cover
  - 5a) Button to detach the dust container
- 6) Dust container handle
- 7) Dust container
  - 7a) Container filter
  - 7b) Filter assembly
  - 7c) Container
- 8) Dust container opening button
- 9) Connector hose
- 10) ON/OFF switch
- 11) EPA filter grill
- 12) EPA filter

## ACCESSORIES

- A) Hose
  - A1) Hose handle
  - A2) Manual suction regulator
  - A3) Tube lock-in button
- B) Telescopic tube locking button
- C) Accessories holder
  - C1) Pipe hook ring
- D) Parquet brush
- E) Lance
- F) Small nozzle
- G) Universal Brush
  - G1) Hook for attaching to accessories holder
  - G2) Brush selector for carpets / floors

 This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

## **PRECAUTIONS**

### **KEEP THESE INSTRUCTIONS**

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.

### **SAFETY WARNINGS:**

#### Risk of electric shock and/or short circuit:

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.

- Never immerse the appliance, the cable or the plugs in water or another liquid.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### **SAFETY WARNINGS:**

#### Risk of injuries and/or burns when using the appliance:

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.

### **SAFETY WARNINGS:**

#### using the appliance:

- We recommend you use original Polti products only, as products of other brands may

## ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

## PREPARATION

- ◆ Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.
- ◆ Insert the suction opening of the flexible tube (**A**) into the connector (**9**) (Fig. 1) (to disconnect it, press the buttons (**A3**) and pull the tube Fig. 2).
- ◆ Unwind the power supply cable (**1**) and insert the plug into a suitable power socket.
- ◆ Press the ON/OFF switch (**10**). The appliance will start to operate. The ON/OFF switch (**10**) can be pressed with your foot to avoid having to bend over.
- ◆ You can adjust the suction power with the cursor (**3**). Move it to the right to increase the suction power. To reduce it, just move the cursor to the left (Fig. 3). We suggest minimum level for curtains, medium-low for sofas, armchairs and pillows, medium-high for carpets and high for floors and hard surfaces (ceramic, marble etc.).

## CORRECT USE OF THE PRODUCT

This appliance is intended for home use for vacuuming solids as described and in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them, as you may find them useful in future.

**Polti declines liability for any damage or accident derived from any use of this appliance which does not comply with the instructions contained in this booklet.**

- ◆ With the manual suction regulator (**A2**) it is possible to intervene promptly in case of an accidental suction (i.e. curtains) by reducing the suction power. We recommend operating the appliance with the regulator open on curtains, rugs, sofas, etc. Move the regulator forward until the hole is exposed on the handle. To return to maximum power, move the regulator backwards until the hole is covered.
- ◆ To end suction, press the ON/OFF switch again (**10**).
- ◆ Replace the filter unit (**7b**) in the container (**7c**), making sure that the two arrows are aligned (Fig. 10).
- ◆ Replace the air filter (**7a**).
- ◆ Reassemble the handle (**6**) on the container (**7c**) turning it clockwise, making sure to align the two arrows (Fig. 9a).
- ◆ Reposition the dust container on the appliance by repeating the steps described previously in the opposite order (Fig. 7).

**ATTENTION:** do not use the appliance without the dust container (**7**) complete with filter.

## EMPTYING AND CLEANING THE DUST CONTAINER

- ◆ Switch off the appliance using the ON/OFF switch (**10**). Disconnect the power supply cable (**1**) from the mains.
- ◆ Unhook the dust container from the vacuum cleaner by opening the cover (**5**) and pressing the dust container release button (**5a**) (Fig.5).
- ◆ Remove the dust container (**7**) lifting it by the handle (**6**).
- ◆ Press the button (**8**) located on the container (**7**) in order to open the container and remove the dirt collected (Fig. 6).

**ATTENTION:** since by operating the button (**8**) the lower base of the reservoir opens, it is recommended that this operation be done over a waste bin.

- ◆ Remove the handle (**6**) by turning it anti-clockwise compared to the container (**7c**), aligning the two reference arrows (Fig. 9b).
- ◆ Remove the container filter (**7a**) and pull out the filter unit (**7b**) and remove any remaining dirt.

**N.B.:** We recommend to clean the container after each use.

**ATTENTION:** never exceed the "MAX" level shown on the dust container (**7**), otherwise the filters will clog reducing the suction power of the appliance.

## USING ACCESSORIES

Accessories may be connected directly to the hose (**A**) or to the telescopic tube (**B**).

### Using the telescopic tube (B)

The length of the telescopic tube can be adjusted. Just press the button (**B1**) to extend it or shorten it at will.

### Use of the accessories holder (C)

The accessories holder allows the accessories to be fastened (**E**) and (**F**) to the telescopic tube (**B**), so they are always close at hand. Just hook the single ring (**C1**) to the telescopic tube and insert the accessories (**E**) and (**F**) in the 2 other rings (Fig. 11).

### Parquet brush (D)

The parquet brush is designed to clean delicate surfaces; it has bristles and wheels in a special material to avoid damaging the surfaces.

### Small nozzle (F)

The small nozzle is recommended for cleaning upholstery surfaces such as the joints of sofas, armchairs, mattresses, car upholstery, etc.

### Lance for corners cleaning (E)

This lance is suitable for thorough cleaning of the more difficult-to-reach places, like skirting-

boards, sofa gaps, armchairs, upholstered furniture, car seats.

## Using the universal brush (G)

Connect the brush to the telescopic tube (B). If you move the selector on the brush (G2) and press with a foot, you can change the suctioning surface without bending down. The position with bristles extended is recommended for all non-carpeted floors. The position without bristles is recommended for carpets.

## AUTOMATIC CABLE WINDER

Before putting the vacuum cleaner away, rewind the power cable by pressing the button (4), careful to assist the cable during winding.

## PUTTING THE APPLIANCE AWAY

It is possible to replace the appliance by resting the brush (G) with the tube (B) in the parking housing (2) as shown in Figure 8.

## CARE OF YOUR APPLIANCE

- **Before attempting any maintenance operation, always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

## CLEANING THE DUST CONTAINER

- ◆ Pull out the dirt container and remove the air filter and the filter unit, as described in the paragraph "Emptying and cleaning the dust container".
- ◆ Rinse all the components under running water and let them dry.
- ◆ Replace everything repeating the steps described previously in the reverse order.

## REMOVING AND CLEANING THE EPA FILTER

- ◆ Turn the grill (11) anti-clockwise (Fig. 11) and remove the filter (12) (Fig. 12).
- ◆ Rinse the filter under cold running water.
- ◆ After washing it, shake it gently to eliminate any dirt residue and excess water.

## ATTENTION

- ◆ Allow the filters to dry naturally, away from direct sources of heat. It is advisable to wait 24 hours before replacing the filters in the appliance.
- ◆ Replace the filters with a new ones if they are torn.
- ◆ The filters should be cleaned every 4 months.
- ◆ Do not clean the filters with the brush as they can be damaged, reducing their filtering capacity.
- ◆ Do not use detergents, do not rub the filter, and do not wash it in a dishwasher.

## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The vacuum cleaner does not turn on	Power supply cable (1) not inserted ON/OFF switch (10) is turned off	Connect the power supply cable (1) to a suitable electric socket. Turn on the ON/OFF switch (10).
The vacuum cleaner does not suction	Flexible hose / telescopic tube clogged. Dust container (7) over full.	Clean the tubes. Empty the dust container (7)