 
 
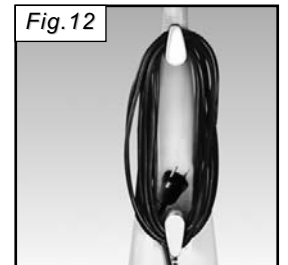 
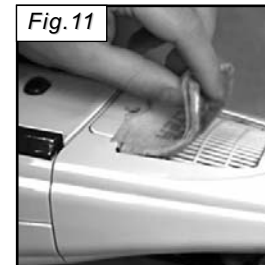 
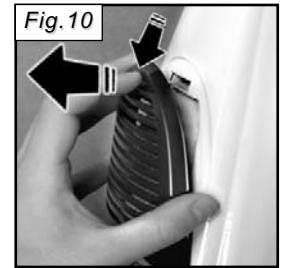 
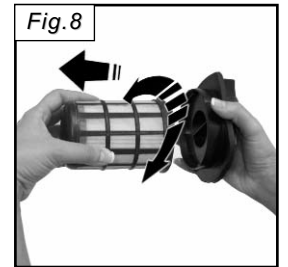 
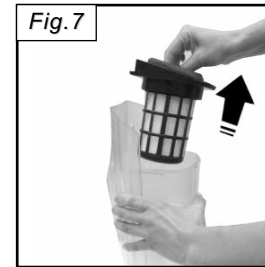 
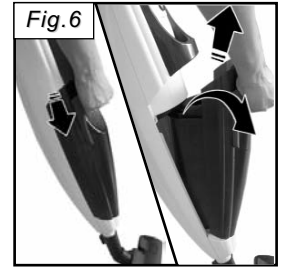 
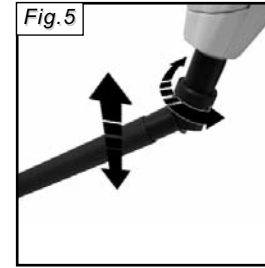 
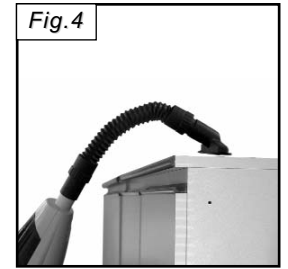 
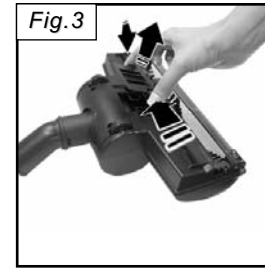 
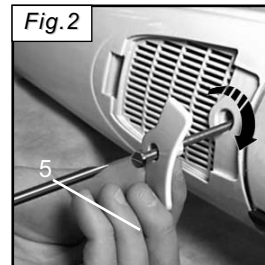 
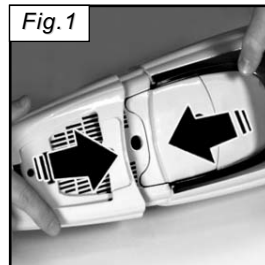 


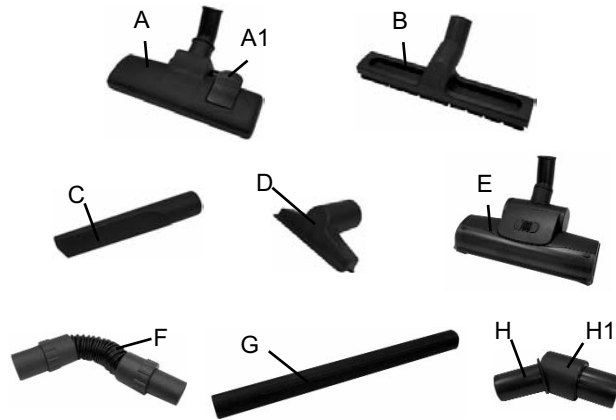

Cinderella®

AS500
AS450
AS400

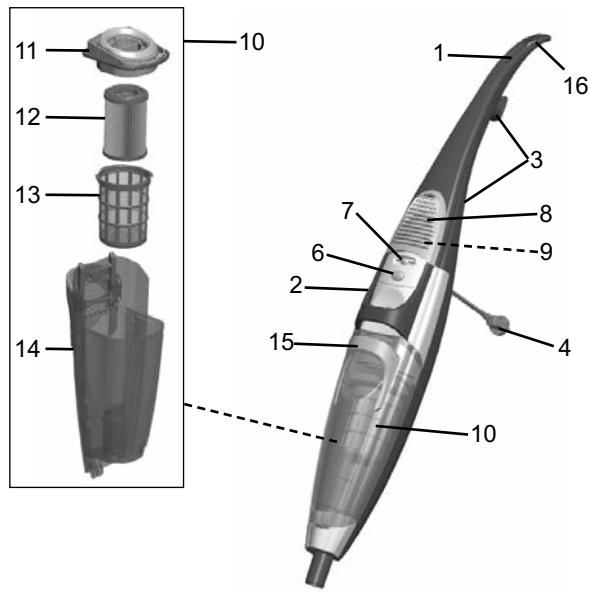

  Read these instructions carefully before using the appliance.

KEY

- 1) Handle
- 2) Motor body
- 3) Cable winder hook
- 4) Power cable
- 5) Handle anchorage screw (fig.2)
- 6) ON/OFF switch
- 7) Suction power control slide
- 8) Air outlet filter cover
- 9) Air outlet filter
- 10) Dust collection container assembly
- 11) Dust collection container filter cover
- 12) Dust collection container filter
- 13) Microperforated mesh
- 14) Dust collection container
- 15) Dust collection container handle
- 16) Hole for hanging up appliance

ACCESSORIES mod. AS500


- A) Universal Brush
- B) Parquet brush
- C) Lance for cleaning corner
- D) Multipurpose nozzle
- E) Turbo brush
- F) Jointed tube
- G) Extension tube
- H) Flexo joint
- H1) Flexo joint cursor

ACCESSORIES mod. AS450

- A) Universal Brush
- B) Parquet brush
- C) Lance for cleaning corner
- D) Multipurpose nozzle

ACCESSORIES mod. AS400

- A) Universal Brush
- C) Lance for cleaning corner
- D) Multipurpose nozzle

 This apparatus conforms with 2004/108/CE (EMC) and 2006/95/CE (low voltage)

POLTI S.p.A. reserves the right without prior notice to introduce technical and construction changes as it considers necessary.

PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Indoor use only
- Read these instructions for use carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance.
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing

maintenance work of any kind

- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts are damaged.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- If it is necessary to replace the power supply cable, please refer to the nearest Polti authorised service centre, since the use of a special tool is necessary.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near a bathtub, shower or container full of water
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- Do not lay the hot appliance on surfaces sensitive to heat.
- Do not leave the appliance exposed to wind or rain.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to extreme temperatures
- Never let children or people who are not familiar with how the appliance works use it.
- Do not press the buttons hard or with a pointed object such as a pen.
- Always rest the appliance on a stable surface.
- In case of accidental fall of the appliance it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Service Centre.
- In order to avoid prejudicing the safety of the appliance, use only original spare parts and accessories approved by the manufacturer.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- Do not suck up liquids.
- Do not use the appliance to suck up acids or solvents, as these might cause serious damage to the appliance and above all do not suck up explosive dust or liquids, as these could cause explosions on coming into contact with the inside components of the appliance.
- Do not suck up toxic substances.
- Do not suck up burning or incandescent objects such as embers, ash or other material in which combustion is taking place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given super-

vision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

CORRECT USE OF THE PRODUCT


This appliance is intended for home use for sucking solids as described and in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them, as you may find them useful in future.

Politi declines liability for any damage or accident derived from any use of this appliance which does not comply with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.

 The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

PREPARATION FOR USE

- 1a. Proceed to mount the handle before using the vacuum cleaner (1).
- 2a. Remove the screw (5) from the appliance handle (1) and attach it to the motor body (2) (fig.1).
- 3a. Tighten screw (5) turning clockwise (fig.2).
The appliance is now ready for use.

SUCTION

- 1b. Connect the appropriate accessory for the cleaning task you wish to perform.
- 2b. Plug in the power cable (4) into a suitable electrical outlet and press the ON/OFF switch (6).
- 3b. The suction power control slide (7) permits control of suction power to suit the surface to be cleaned.
- 4b. If you move the suction power control slide (7) towards max, the appliance's suction power will be increased.
Minimum power is recommended for curtains.
Medium power is recommended for carpets and upholstery.
Maximum power is recommended on hard floor surfaces.

USING THE ACCESSORIES

USING THE UNIVERSAL BRUSH (A)

Connect the brush to the telescopic tube. If you move the selector on the brush (A1) and press with a foot, you can change the bristles position without bending down. The position with bristles extended is recommended for all non-carpeted floors. The position without bristles is recommended for carpets.

PARQUET BRUSH (B) (mod.AS500 - AS450)

The parquet brush is designed to clean delicate surfaces and therefore has bristles and wheels in material specially selected to avoid damaging such surfaces.

LANCE FOR CLEANING CORNERS (C)

The lance is recommended for thorough vacuum cleaning of hard-to-reach spots such as skirting boards and folds in sofas, armchairs, upholstered furniture and car upholstery.

MULTIPURPOSE NOZZLE (D)

The multipurpose nozzle is recommended for cleaning upholstery surfaces such as the joints of sofas, armchairs, mattresses, car upholstery, etc.

TURBO BRUSH (E) (mod.AS500)

The turbo brush uses a turbine system which operates on suction power only, without electricity.

The turbo brush increases the effectiveness and efficiency of suction on soft furnishings such as carpets and fitted carpeting since it combines suction with a mechanical action to remove dust and dirt (organic and inorganic) and fibres (hair, etc.).

By using the turbo-brush on carpets you can refresh the fibres thanks to the action of the roller, which separates them so that the cleaner can reach right down into the carpets.

The turbo brush can be used as a traditional brush on hard surfaces since it has a by-pass system which diverts the air flow directly to the suction pipe.

It is also suitable for suctioning up and removing pet hair.

The turbine can be easily accessed for cleaning thanks to the practical flap (fig.3).

JOINTED TUBE (F) (mod.AS500)

The handy jointed tube is particularly adaptable as it can be folded and adjusted to suit the task in hand. It is handy for cleaning spots that are hard to reach with traditional tools, such as high shelves, the tops of wardrobes, underneath furniture, etc. All other tools may be fitted to the jointed tube (fig.4).

EXTENSION TUBE (G) (MOD. AS500)

The extension tube may be connected with all accessories to clean hard to reach spots.

USING THE FLEJO JOINT (H) (mod.AS500)

This special joint allows you to reach hard-to-reach spots without bending down. To change its inclination, rotate the cursor (H1) by a half turn. The joint that allows you to alter the working angle of the tube will then appear (fig.5). Put the joint back in its original position when you have finished, and cover it with the cursor to lock it in place.

CARE OF YOUR VAPORELLA

- **Before attempting any maintenance operation, always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

EMPTYING AND CLEANING THE DUST COLLECTION CONTAINER (10)

- Turn off the appliance with the ON/OFF switch (6) and unplug the power cable (4).
- Holding the appliance upright, press the dust collection container handle (15) downwards while pulling the dust collection container assembly out of the appliance (fig.6).
- Empty the dust collection container (14). If the container is very dirty, rinse it under running water. Dry the container before putting back the filter.
- Pull the dust collection container lid upwards (11) and pull it off the container (14) (fig.7).
- Turn the micro-perforated mesh anti-clockwise (13) and separate it from the lid (11) (fig.8).
- Remove the filter (12) from the micro-perforated mesh (13).
- Rinse the micro-perforated mesh (13) and the filter (12) under running water to remove all residual dirt.

CAUTION:

- Let filters dry naturally, away from light and heat sources. It is best to wait 24 hours before putting the filters back into the appliance.
- Do not use cleaning products or abrasive pads on the filter, and do not put it in the dishwasher.
- Put the filter (12) back into the micro-perforated mesh (13), being careful to make sure that the part of the filter (12) with the seal is facing upwards (fig.9); if this is not the case, the filter body will not connect to the lid.
- Screw the micro-perforated mesh (13) back onto the lid (11).
- Place the assembled filter lid into the dust collection container (14) and then put the dust collection container assembly (10) back in place in the appliance, proceeding with the operations described above but in reverse order.

CLEANING OR REPLACING THE AIR OUTLET FILTER

The filter should be cleaned after using the appliance 2 or 3 times. Replace the air outlet filter if it is torn or considerably worn.

- Press down on the tongue and pull the air outlet filter lid (8) towards you until it is released (fig.10).
- Remove the air outlet filter (9) from its housing (fig.11).
- Wash with soap and water, rinse and leave to dry.
- Put the air outlet filter (9) back into its housing and close the lid again (8).

STORING THE APPLIANCE

- Wind up the power cable on the power cable winder hooks provided (3) (fig.12).
- Cinderella may be hung up by the hole provided (16) on a hook with a load-bearing capacity of at least 7 Kg.