

Vaporella®



FOREVER 1400








FOREVER 1402



FOREVER 1405 PRO



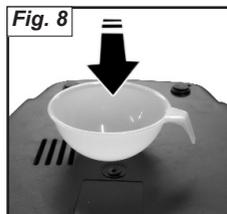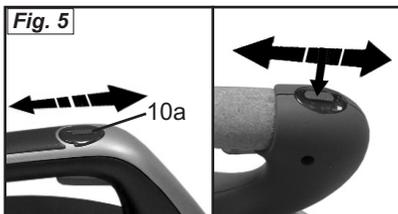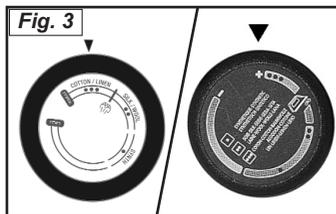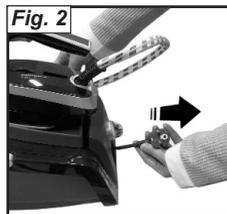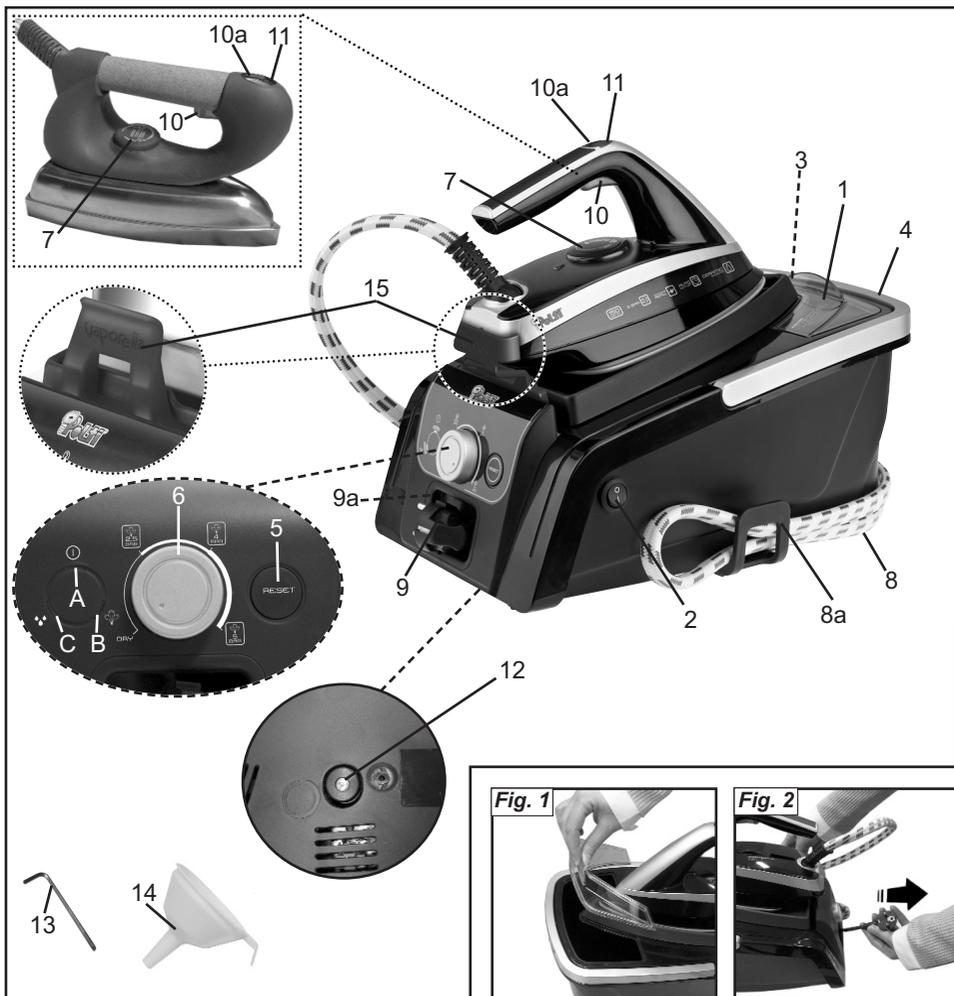

PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- If this instruction manual is lost, it is possible to review it and/or download it from the web site www.polti.com
- Unpack the product and make sure it is intact as well as all the accessories listed in the key. If in doubt, do not use the product and contact an Authorized Service Centre.
- This appliance has been designed only for domestic use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Children should be supervised to ensure that they do not play with the appliance.
- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- High-pressure jets can be dangerous if used improperly. Do not direct the steam jet at people, live electrical equipment or the appliance itself.
- Keep all the parts of the packaging out of the reach of children, they are not a toy. Keep the plastic bag out of the reach of children: danger of suffocation.



ATTENTION: High temperature. Risk of scalding!
If indicated do not touch the parts on the product



ATTENTION:
Risk of scalding!

SAFETY WARNINGS:**Risk of electric shock and/or short circuit:**

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Do not direct the steam jet at live electrical and/or electronic equipment or at the appliance itself.

SAFETY WARNINGS:**Risk of injury and/or burns during use of the appliance:**

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Before cleaning or storing the appliance, always first ensure that the appliance has cooled down completely.
- Do not direct the steam jet at people, animals or debris.
- Never place your hands inside the jet of steam.
- While refilling with water, switch off and disconnect the appliance from the mains.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.
- If ironing whilst sitting down, take care to ensure that the jet of steam is not angled towards your legs. Steam can scald.
- Before connecting the appliance to the current, ensure that the continuous steam jet button is not pressed.
- Never leave the iron unattended when it is plugged in.
- Before accessing the boiler for cleaning, make sure that the product has been turned off and disconnected from the mains for at least 2 hours.

SAFETY WARNINGS:using the appliance:

- This appliance has been designed to work with normal tap water. Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.
- Do not use limescale products other than Kalstop FP2003.
- Never leave the appliance exposed to the weather.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Press the buttons only with a finger, without excessive force and avoid using a pointed object such as a pen.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- It is necessary to keep the unit in horizontal position during operation.
- Always rest the appliance on a stable surface.
- Iron only on supports that are heat resistant and which allow the steam to permeate.
- If the iron rest mat needs to be replaced, only use original spare parts.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, make sure that the surface on which the stand is placed, is stable.
- Do not place the hot appliance on heat-sensitive surfaces.
- Keep the device out of the reach of children, when it is on and during cooling.



Read these instructions carefully before using the appliance.

Dear Customer

Thank you for your confidence in buying this Polti product for perfect ironing in less time. Your Vaporella has been designed to ensure maximum ironing comfort; its quality materials make it a reliable work-mate.

The powerful jet of Vaporella steam acts on the fabrics eliminating every crease.

Therefore it is not necessary to press on or iron repeatedly. Just let the iron slide over the garment to obtain perfect ironing, saving time and effort.

With Vaporella it is possible to iron vertically to revive fabrics and take out bad smells from jackets, clothes and overcoats.

Thanks to its self-refilling system, Vaporella is quickly ready for use and does not need any interruption to your ironing for refilling the boiler.

Before using Vaporella, we recommend reading these instructions carefully.

KEY

- | | |
|---|------------------------------|
| 1) Tank lid | A) ON indicator light |
| 2) ON/OFF switch | B) Steam pressure indicators |
| 3) Tank | C) ON/OFF indicator light |
| 4) Carry handle | |
| 5) "RESET" button | |
| 6) Steam flow control knob | |
| 7) Temperature adjustment knob | |
| 8) Flex (electric cable + steam) | |
| 8a) Monotube housing - Power supply cable | |
| 9) Power supply cable | |
| 9a) Cable winder | |
| 10) Steam request button | |
| 10a) Continuous steam jet button | |
| 11) "Iron heating" indicator light | |
| 12) Boiler cap | |
| 13) Hexagon wrench | |
| 14) Filler funnel | |
| 15) Block iron | |



This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).

Politi S.p.A. reserves the right to change equipment or accessory specification without prior notice.

CORRECT USE OF THE PRODUCT

This appliance is intended for home use as a steam generator as described and in accordance with the instructions provided in this manual. Please read these instructions carefully and keep them, as you may find them useful in future.

Polti Spa declines liability for any damage or accident derived from any use of VAPORELLA which does not comply with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

IMPORTANT

Before leaving our factory all our products are rigorously tested. This is the reason why your VAPORELLA may contain some residual water in the boiler.

PREPARATION FOR USE

- Pull up the self-refilling tank lid (1) (Fig. 1) and fill the tank with 1,2l of water, making sure it does not overflow. Close the lid.

This appliance has been designed to work with normal tap water.

However, since water contains limestone by nature, which may cause scaling in the long run, we recommend using a 50/50 mixture of tap water and demineralised water or treated with softening systems. To use tap water and avoid scale formation, we recommend the addition of the special natural scale removal agent Kalstop FP2003.

Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.

- Slowly pull out the power cable (9) to the desired length as shown in (fig. 2).
- Connect the cable plug to an earthed power supply of the correct voltage.
- Press the ON/OFF switch (2). The ON indicator light (A) and the "Iron heating" indicator light (11) will turn on.
- The sound emitted on switching on your appliance and periodically during use, is due to the water refilling system and is quite normal.

INSTRUCTIONS FOR USE

Before ironing an item of clothing, always check the symbols on its label, for the instructions provided by the manufacturer.

Check, based on the following table, the most appropriate type of ironing:

	Steam ironing allowed For dry ironing, set temperature adjustment knob (7) on ...
	Steam ironing allowed For dry ironing, set temperature adjustment knob (7) on ..
	Check the fabric's resistance to steam ironing or dry iron with temperature adjustment knob (7) set on •
	- do not iron - steam ironing or treatment not allowed

STEAM IRONING

- Adjust the temperature of the iron to the "COTTON - LINEN" position by turning the dial (7) (fig. 3).
- Adjust steam pressure according to the type of fabric to be ironed by turning the steam flow control knob (6) to one of the following 3 options (fig. 4):

	Intensità di vapore leggera <i>for synthetic or delicate fabrics</i>
	Medium steam <i>for wool and fibres</i>
	Strong steam <i>for cotton, denim and linen</i>

- The Steam pressure indicator (B) flashes.
- Before starting to iron, wait for the steam pressure indicator (B) to remain on fixed and the "Iron heating" indicator light (11) to go out.
- Push the button (10) on the iron to release bursts of steam from the holes on the soleplate. Release the button and the steam flow stops.

NOTE: during initial operation of the iron, a few drops of water mixed with steam may come out of the soleplate until the temperature stabilises. It is advisable to direct the first jets of steam onto an old cloth until a uniform jet of steam is obtained.

- In order to have a continuous steam jet, move the button (10a) forwards. Steam will keep on coming out, even releasing the steam request button. To interrupt the outlet, move the button (10a) backwards (fig.5).

DRY IRONING :

- To dry iron, regulate the iron temperature using the slider (7) to the temperature required by the fabric.
- Position the steam flow control knob (6) to "DRY". On this setting, the boiler remains off and steam cannot be generated. Only the iron will remain operative.

NOTE:

- The "Iron heating" indicator light (11) turns on and off during use. This indicates that the electrical resistor has started to work to keep the temperature in the iron steady. This is a normal occurrence, and it is therefore possible to continue ironing.

SHORTAGE OF WATER

The lack of water in the tank (3) is signalled by the indicator light (C) coming on.

To return to ironing, proceed as follows:

- Fill the tank (3) again, as described in the paragraph "PREPARATION".
- Press the "RESET" button (5) to cancel the shortage of water alarm. The indicator light (C) will go out.

PUTTING AWAY THE APPLIANCE

Make sure the appliance has cooled down completely before putting it away.

- Tug on the power cable gently (9) until it clicks once, and then accompany it with your hand as it is automatically wound up by the cable winder (9a).
- Position the monotube (8) in the specific housing (8a) (fig. 6).
- Carry the Vaporella by its convenient carry handle (1) (fig.6).

ATTENTION: before moving Vaporella with the handle, make sure that the power supply cable (9) and monotube (8) have been stored as described previously.

ENERGY SAVING STAND-BY FUNCTION

After 10 minutes of the appliance not being used, it automatically goes into stand-by mode. Both the boiler and iron are switched off. The indicator lights (A), (B) and (C) flash simultaneously.

To re-activate the appliance, press the steam request button (10)f or at least 1 second.

N.B.: The stand-by function will not be applied if the steam flow control knob (6) is set to "DRY".

KALSTOP

Water by its nature contains magnesium, mineral salts and other deposits which in hard water areas can contribute to limescale build up in the tank. In very hard water areas we recommend the use of our Kalstop FP2003, a special natural-base decalcifier which inhibits and breaks down limescale. This is a preventive against scale build-up and protects the metal walls of the boiler. Kalstop FP2003 can be found in small appliance stores, Polti service centres and on the web site www.polti.com

CARE OF YOUR VAPORELLA

- **Before attempting any maintenance operation, always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents which may harm the body material.

CLEANING THE BOILER

ATTENTION - Risk of burns!

Make sure that the boiler is cold and has been disconnected from the mains for at least 2 hours.

- To maintain optimum performance, clean the boiler every 10/20 uses depending on the amount of limestone in the water.

- Disconnect the appliance and let it cool down for at least 2 hours.
- Empty the water tank to prevent leakage.
- Turn the appliance upside-down and use the hexagon wrench (13) to unscrew the boiler cap (12) on the bottom of the appliance (fig.7).
- Use the funnel (14) to pour 0,25 litre of cold water into the boiler.

CAUTION: do not pour more than the specified amount of water into the boiler. Pour water slowly, being careful not to let it overflow, as this could damage the appliance (fig.8).

- Rinse out the boiler and pour the water away into the sink or into a container for collecting dirty water.
- If the water is very dirty, repeat the operation until it is clean.
- Put the cap back on the boiler, checking that the seal is present and that the cap is screwed on properly.
- Fill the water tank again and put the tank lid.
- Turn the appliance on again.
- Before ironing, release steam into the sink or another container and check that the steam is clean. This should take a few seconds.
- Resume ironing normally.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Water comes out of the iron instead of steam	The appliance has not reached the right temperature yet.	Wait for the "Steam Ready" indicator light (B) and the iron indicator light (11) to turn off.
	The temperature control dial (7) has set at the minimum	Increase the regulation of the temperature control dial (7).
The appliance is on but it is not producing steam	Water tank (3) is empty or not inserted correctly.	Fill the water tank (3).