Vaporetto®

SV300

REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO
www.polti.com

POLTI
NATURAL HOME FEELING

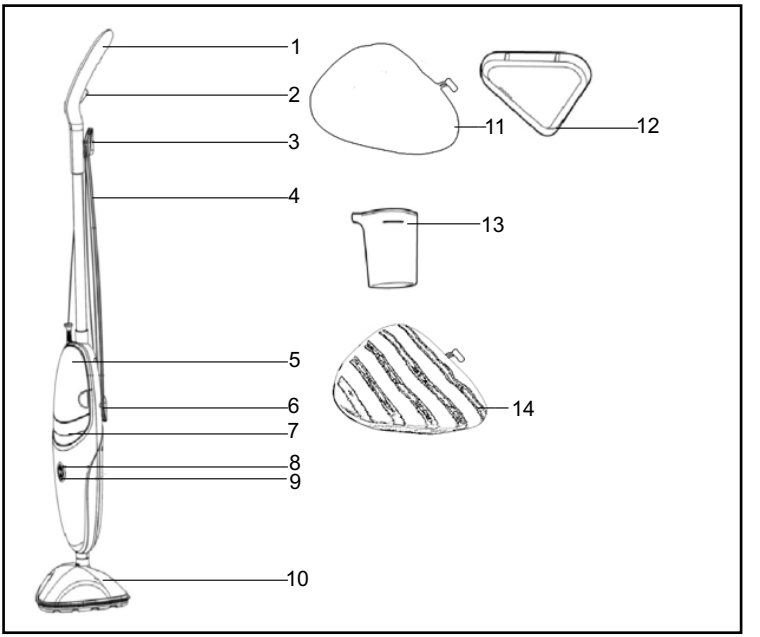
1
2
3
4
5
6
7
8
9
10
11
12
13
14

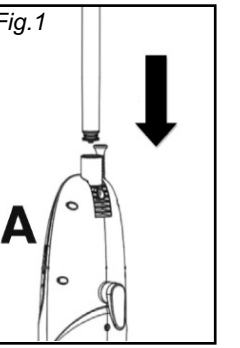
Fig.1
A

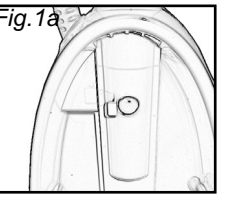
Fig.1a

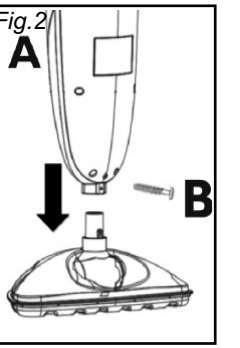
Fig.2
A
B

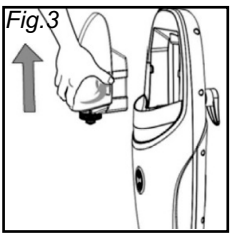
Fig.3

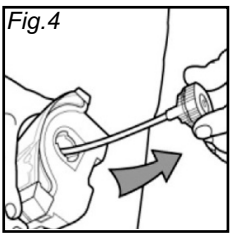
Fig.4

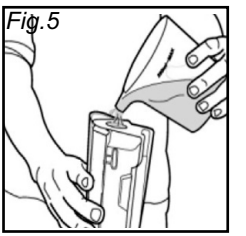
Fig.5

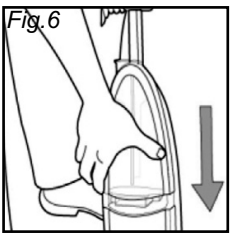
Fig.6

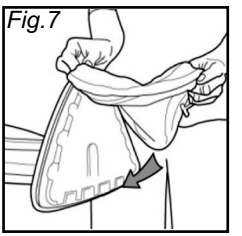
Fig.7

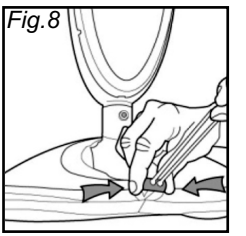
Fig.8

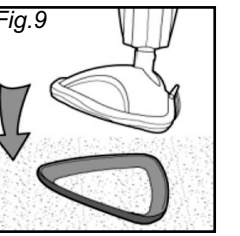
Fig.9

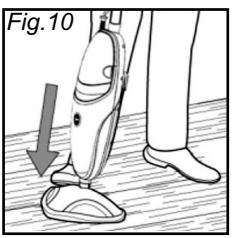
Fig.10

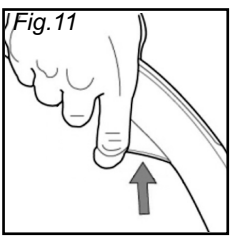
Fig.11

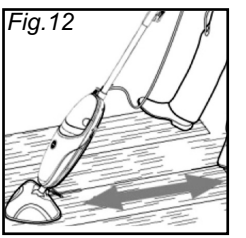
Fig.12

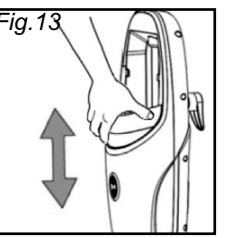
Fig.13

PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- If this instruction manual is lost, it is possible to review it and/or download it from the web site www.polti.com
- Unpack the product and make sure it is intact as well as all the accessories listed in the key. If in doubt, do not use the product and contact an Authorized Service Centre.
- This appliance has been designed only for domestic use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Children should be supervised to ensure that they do not play with the appliance.
- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- High-pressure jets can be dangerous if used improperly. Do not direct the steam jet at people, live electrical equipment or the appliance itself.
- Keep all the parts of the packaging out of the reach of children, they are not a toy. Keep the plastic bag out of the reach of children: danger of suffocation.

	ATTENTION: High temperature. Risk of scalding! If indicated do not touch the parts on the product
	ATTENTION: Risk of scalding!

SAFETY WARNINGS:

Risk of electric shock and/or short circuit:

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Do not direct the steam jet at live electrical and/or electronic equipment or at the appliance itself.

SAFETY WARNINGS:

Risk of injuries and/or burns when using the appliance:

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Before cleaning or storing the appliance, always first ensure that the appliance has cooled down completely.
- Do not direct the steam jet at people, animals or debris.
- Never place your hands inside the jet of steam.
- While refilling with water, switch off and disconnect the appliance from the mains.

SAFETY WARNINGS:

using the appliance:

- The machine should be used exclusively with demineralised water. In order to avoid limescale build up, tap water must not be used.
- Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.
- Never leave the appliance exposed to the weather.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- Keep the device out of the reach of children, when it is on and during cooling.

Read these instructions carefully before using the appliance.

Dear Customer,

We want to thank you for the trust you've placed in us by purchasing this product and for helping protect the most precious asset around us: ***NATURE!*** *VAPORETTO solves all your cleaning and hygiene needs without the use of toxic detergents which damage our environment: the water is turned into steam which allows deep cleaning and is completely eco-friendly.*
In designing the appliance, our team of experts has developed extra tools to make it safer and more efficient.

- *All components and accessories are built with high-quality, heat-resistant materials.*

Please also visit our website www.polti.com, where you can find all the information and advice necessary to better use the product, and where you can register your newly purchased product to receive exclusive benefits.

KEY

GENERATOR

1) Handle
2) Steam button
3) Upper cable rewind
4) Power supply cable
5) Water tank
6) Lower cable rewind
7) Limescale filter
8) Power indicator
9) Pressure indicator

ACCESSORIES

10) Brush
11) Universal cloth
12) Rug/Carpet frame for brush
13) Jug
14) Very smooth cloth

CE *This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).*

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

CORRECT USE OF THE PRODUCT

This appliance is intended for domestic use as a steam generator, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them for future reference.

Polti S.p.A. declines all liability for any damage or accident deriving from any use of this appliance which is not in conformity with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.

The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

IMPORTANT

Before leaving our factory all our products are rigorously tested. This is the reason why your Vaporetto may contain some residual water in the tank.

PREPARATION

- Remove the appliance from the packaging, checking that the product is whole and that all the parts are there.
- Insert the handle into the specific opening on the appliance (**A**)(Fig. 1), making sure that the pin on the handle lines up with the hole on the appliance (Fig. 1a).
- Unscrew the screw (**B**) from the appliance (**A**), using an appropriate screwdriver. Connect the appliance (**A)** to the brush (**10**) and tighten the screw (**B**) (Fig. 2).
  Warning: Check every so often that the screw is tight.
- Remove the water tank (**5**) from the appliance pulling it upward (Fig. 3). Unscrew the cap with the water take-up hose and remove it from the tank (Fig. 4).
- Fill the tank with water using the jug supplied (Fig. 5). Water by its nature contains limescale which, as time goes by, can cause problems. To protect your appliance, use demineralised water.
  Do not add other substances or additives to the tank.
- Screw the cap with the water take-up hose back on the tank and hook it back on the appliance (Fig. 6).
- Position the cloth (**11/14**) under the brush (Fig. 7) and fasten it by pulling the cord (Fig. 8).

Warning: Do not use the appliance without the cloth.

USE

- Plug the power lead (**4**) into a suitable socket with an earth connection. The power indicator light will come on (**8**).
- The power indicator light (**8**) will remain on constantly indicating that the appliance is connected to the mains.
- Wait for the pressure indicator lamp (**9**) to come on. At this point the appliance is ready for use.
- To release the brush (**10**) from the appliance, put your foot on the brush (**10**) and at the same time tilt the handle (**1**) (Fig. 10). To block it again, just return it to the original position (Fig. 10).
- Press the steam button (**2**) to dispense steam. To stop it, release the steam button (**2**).
- Clean the floors by moving the brush forward and backward.
- To clean rugs and carpets, rest the brush (with

the cloth attached) on the special frame (**12**) so that it can slide on the surface (Fig. 9).

NOTE: the steam ready light (**9**) turns on and off during use. This indicates that the electric resistance is operating to keep temperature constant and is therefore quite normal.

Warning:

- ***To remove the cloth from the brush, detach the power supply plug from the electric socket and wait a few minutes to allow the cloth to cool.***

NO WATER

The water level is always visible thanks to the transparent tank.
When the water inside the tank (**D**) has been used up, steam will stop being released.
To restart operations just fill the water tank (**5**) again as described in the paragraph "PREPARATION".

Warning: This must always be done after having disconnected the appliance from the mains.

LIMESCALE FILTER

By nature, water contains mineral salts that favour the formation of scale.
Vaporetto SV300 is supplied with a limescale filter (**7**) which reduces the passage of mineral salts and therefore the formation of limescale.

Always use demineralised water.

We recommend that the filter be changed 2 times per year.

To replace the filter, proceed as follows:
• Unplug from the mains electricity.
• Remove the water tank (**5**) (Fig. 3) pulling it upward, then remove the filter (**7**), still pulling upward (Fig. 13).
• Position the new filter (**7**), push gently and make sure that it is perfectly inserted (Fig. 13), then reposition the water tank (Fig. 6).

*Inside the package there is a spare filter (**7**), in addition to the one already mounted on the appliance.*

Note: The limescale filters, as well as replacement cloths, can be purchased in all leading household appliance stores, or online at www.polti.com.

STORING THE DEVICE

Before replacing the appliance:
- Unplug the power supply from the mains.
- Completely empty the water tank (**5**) to avoid water leaks.
- Before detaching the cloth from the brush, wait a few minutes to allow it to cool.
- Wind the power cable around the special cable rewinds (**3**) and (**6**).

Warning:

- ***Before using the appliance again, remember to unwind the power cable completely. The upper cable winder (3) rotates 180° in order to wind up the power cable quickly.***
- ***Do not keep the appliance connected to the power supply with the cable wound up.***

PRACTICAL ADVICE FOR THE USE OF THE ACCESSORIES

PRECAUTIONS

• Before treating leather, special fabrics and wood surfaces, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.
• Please pay careful attention when cleaning treated wood or terracotta flooring, as prolonged use of steam may damage the wax, polish or colour of the surfaces to be cleaned. We therefore recommend only steaming these surfaces for short periods of time, or cleaning using a previously steamed cloth.
• The universal cloth (**11**) can be used on most surfaces. If when using the universal cloth (**11**), it does not slide smoothly, you can use the very smooth cloth (**14**).

CARE OF YOUR APPLIANCE

- Before attempting any maintenance operation, make sure to always disconnect the appliance from the mains.
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents as these could damage the plastic surfaces.
- The cloths provided can be washed by following the instructions included on the label.

TROUBLESHOOTING

PROBLEM	SOLUTION
Steam does not come out	- Check that the cable is properly plugged into the mains socket. - Check that the pressure indicator light (9) is on. - Check that there is water in the tank (5). If the problem persists after checking the above points, perform the following operation: disconnect from the mains and wait (approximately 2 hours) until the appliance cools, after which follow the points listed in the Chapter “Use”. If the problem persists, take it to an Authorized Service Centre.

WARRANTY

WARRANTY CONDITIONS

For repairs, the appliance must be accompanied by proof of purchase.
Polti products are guaranteed to the original purchaser for two years from the date of purchase as shown on a valid receipt issued by the seller.
This guarantee does not affect the consumer's rights under European Directive 99/44/CE regarding certain aspects of the sale and guarantee of consumer goods; consumers should address claims under these provisions to the retailer where they purchased the goods.
This guarantee is effective in countries where European Directive 99/44/CE has been implemented. Local guarantee legislation applies in all other countries.

WHAT THE WARRANTY COVERS

During the guarantee period, Polti will repair products with defects in workmanship or materials at no charge to the customer for either labour or materials.
In case of irreparable defects, Polti S.p.A. may replace the product free of charge.
A minor patent defect for which it was not possible, or is excessively expensive, to repair or replace does not give the right to terminate the contract.

To have work performed under this guarantee, consumers must contact an Authorised Polti Technical Assistance Centre. The consumer must present a valid receipt issued by the seller at the time of purchase as evidence of the date of purchase; without proof of purchase and the relative date, the work will be charged. Therefore, please store your receipt carefully for the entire warranty period.

WHAT THE WARRANTY DOES NOT COVER

The warranty is subject to limitations and does not cover defects due to improper use or use other than that indicated in the instruction booklet which forms an integral part of the sales contract of the product. The warranty does not cover defects resulting from force majeure (fires, short circuits) or caused by third parties (tampering). The warranty does not cover damages caused by the use of non-original Polti parts, repairs or alterations performed by staff or service centres not authorised by Polti.

The guarantee does not cover parts that are damaged by wear or subject to normal wear (consumables such as filters, brushes, etc.). The guarantee doesn't cover any possible damage caused by limescale. Polti will accept no responsibility for any injury to people or animals or damage to objects directly or indirectly resulting from failure to follow the instructions provided in the instruction booklet, in particular the warnings and product maintenance instructions.
The warranty does not cover the assembly of accessories that have been modified or are not adapted to the appliance.

REGISTER YOUR PRODUCT

Register your appliance on our website at www.polti.com.

You will receive an email containing a promotional code and the instructions for taking advantage of the current offers.

To register your Polti product, you must enter, in addition to your personal information, the appliance serial number (SN) which you will find on the silver label, located under the product:

Example:

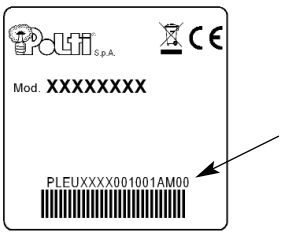

SERIAL NUMBER
(18 digit) SN

To save time and keep your serial number to hand, write it in the space provided on the back cover of this manual.

SN:

|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|—|

REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO

www.polti.com

YOU WILL ENJOY SPECIAL OFFERS
POTRAI USUFRUIRE DI OFFERTE SPECIALI
VOUS POURREZ BÉNÉFICIER D'OFFRES EXCLUSIVES
PODRÁ DISFRUTAR DE OFERTAS ESPECIALES
SIE KÖNNEN DIE SONDERANGEBOTE NUTZEN
VOCÊ APRECIARÁ AS NOSSAS OFERTAS ESPECIAIS

CALL CENTER

ITALIA SERVIZIO CLIENTI	**848 800 806**
FRANCE SERVICE CLIENTS	**04 786 642 10**
ESPAÑA SERVICIO AL CLIENTE	**02 351 227**
PORTUGAL SERVIÇO AO CLIENTE	**707 780 274**
UK CUSTOMER CARE	**0845 177 6584**
DEUTSCHLAND KUNDENDIENST	**03222 109 069 6**

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM

POLTI

NATURAL HOME FEELING

Polti S.p.A. - Via Ferloni, 83
22070 -Bulgarograsso (CO) - Italy